





# Changing inserts in your ESD Push Chute (you really *can* do it!)

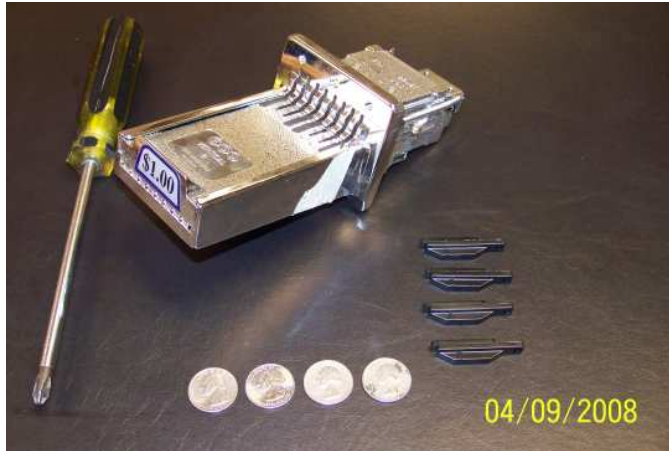

1) Remove the Push Chute from the coin door for easier access. You will need the Push Chute (of course), enough coins to make it work in its current setting, the inserts for the desired setting, and a Phillips screwdriver.




2) To gain access to the inserts, put your coins into the correct slots and then push in the handle.

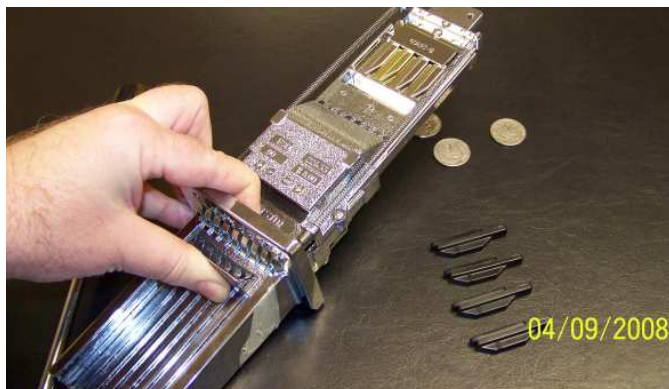


3) After pushing in the chute and your coins drop out, you will be able to access the inserts, and a section that may contain spare inserts. Continue to hold the handle in as shown...


4) and unhook the two large return springs from the small hooks on the spring bracket.

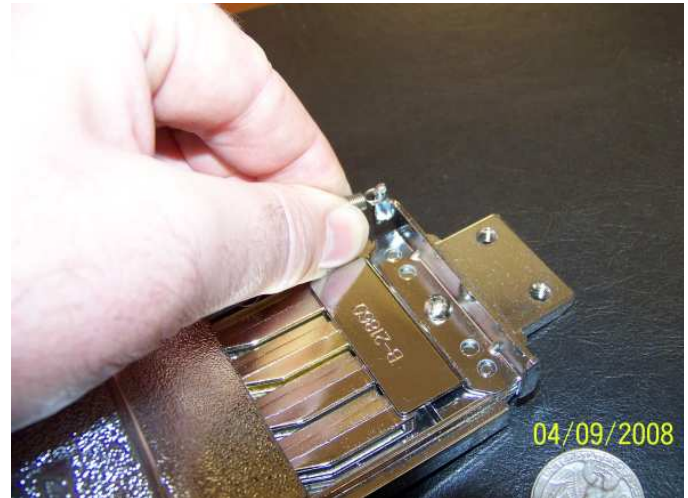

5) you can remove the single Phillips screw holding the spring bracket to access the spare inserts (if any). This will also be a very good place to store any inserts you remove during this process so you will easily be able to find them for future adjustments, and aren't having to dig in your workbench, toolbox, desk drawer, etc.. **BE SURE TO RETIGHTEN THIS SCREW ONCE YOU ARE DONE**, if it is sticking up just a little the unit will not move freely. No need to use Olympic-caliber strength, just make sure it is snug. Now turn the unit over.

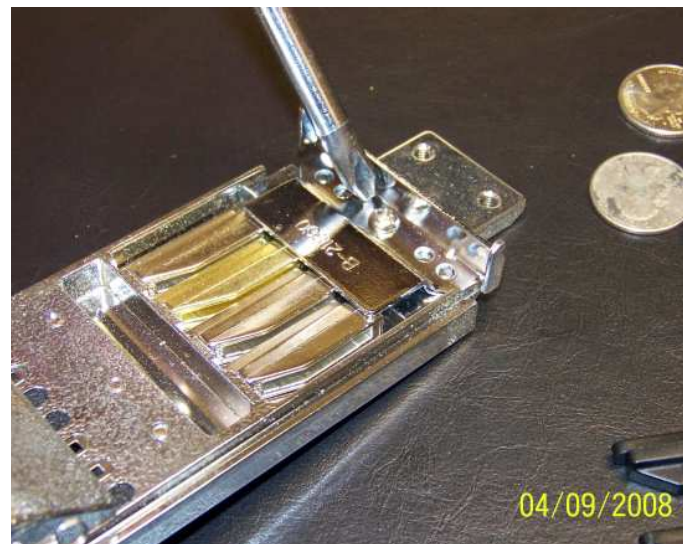

6) Regardless of if you have a V-4, V-5 or V-8 unit, the insert retainer plate holds the inserts in. Remove the Phillips screw or screws holding this plate and you will have access to all the inserts.

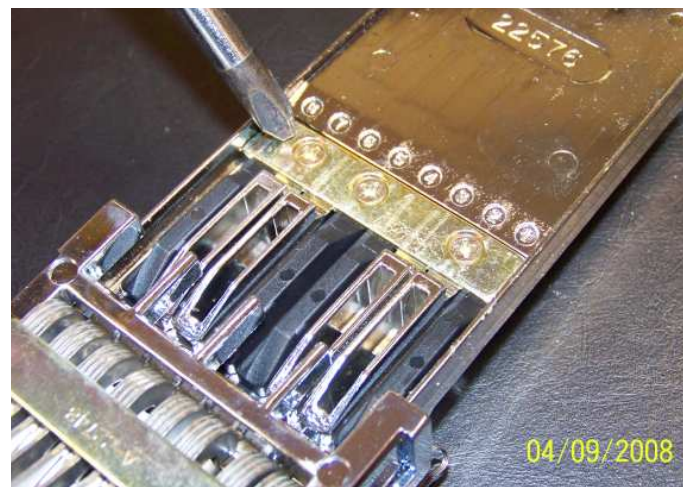






7) With the Insert Retainer Plate removed, you have ready access to make whatever changes you see fit. Switch coin inserts with blanks, or switch blank inserts for coins. When finished, it is important that the Insert retainer Plate is attached snugly so the unit will move freely and not catch on the plate or screws. Once the Insert Retainer Plate and Spring Bracket are snugly attached, reconnect the return springs, and test that the handle moves smoothly. If you've installed blanks, just give it a push. If you've set your Push Chute for coin use, you'll need the correct coins so it will work.

Reinstall the unit in the coin door, replace the coin door, and enjoy a game on your table.

ITEM #	PART NO.	DESCRIPTION
1	21500	BODY
2	21542	HANDLE
3	21507	BRIDGE
4	20003	WATCHET
5	20003	WATCHET SPRING
6	20004	SPRING RETAINER
7	20730	WATCHET SCREW
8	21500	INSERT RETAINER PLY SCREW
9	21500	INSERT RETAINER PLY SCREW
10	21512	BLANK INSERT
11	21502	BOTTOM PLATE
12	20004	BOTTOM PLATE SCREW
13	21502	PIVOT PIN
14	20181	LEVER
15	21507	LEVER SPRING
16	21510	WATCHET PLATE
17	21490	DATE
18	21507	DATE RETAINER
19	21490	DATE SCREW
20	20003	WATCHET SCREW
21	21421	WATCHET SCREW
22	20004	WATCHET SPRING
23	20003	WATCHET SPRING
24	20003	WATCHET SPRING
25	21500	SPRING BRACKET
26	21500	SPRING BRACKET
27	21500	SPRING BRACKET
28	21500	SPRING BRACKET
29	21500	SPRING BRACKET
30	21500	SPRING BRACKET
31	21500	SPRING BRACKET
32	21500	SPRING BRACKET
33	21500	SPRING BRACKET
34	21500	SPRING BRACKET
35	21500	SPRING BRACKET
36	21500	SPRING BRACKET
37	21500	SPRING BRACKET
38	21500	SPRING BRACKET
39	21500	SPRING BRACKET
40	21500	SPRING BRACKET
41	21500	SPRING BRACKET
42	21500	SPRING BRACKET
43	21500	SPRING BRACKET
44	21500	SPRING BRACKET
45	21500	SPRING BRACKET
46	21500	SPRING BRACKET
47	21500	SPRING BRACKET
48	21500	SPRING BRACKET
49	21500	SPRING BRACKET
50	21500	SPRING BRACKET
51	21500	SPRING BRACKET
52	21500	SPRING BRACKET
53	21500	SPRING BRACKET
54	21500	SPRING BRACKET
55	21500	SPRING BRACKET
56	21500	SPRING BRACKET
57	21500	SPRING BRACKET
58	21500	SPRING BRACKET
59	21500	SPRING BRACKET
60	21500	SPRING BRACKET
61	21500	SPRING BRACKET
62	21500	SPRING BRACKET
63	21500	SPRING BRACKET
64	21500	SPRING BRACKET
65	21500	SPRING BRACKET
66	21500	SPRING BRACKET
67	21500	SPRING BRACKET
68	21500	SPRING BRACKET
69	21500	SPRING BRACKET
70	21500	SPRING BRACKET
71	21500	SPRING BRACKET
72	21500	SPRING BRACKET
73	21500	SPRING BRACKET
74	21500	SPRING BRACKET
75	21500	SPRING BRACKET
76	21500	SPRING BRACKET
77	21500	SPRING BRACKET
78	21500	SPRING BRACKET
79	21500	SPRING BRACKET
80	21500	SPRING BRACKET
81	21500	SPRING BRACKET
82	21500	SPRING BRACKET
83	21500	SPRING BRACKET
84	21500	SPRING BRACKET
85	21500	SPRING BRACKET
86	21500	SPRING BRACKET
87	21500	SPRING BRACKET
88	21500	SPRING BRACKET
89	21500	SPRING BRACKET
90	21500	SPRING BRACKET
91	21500	SPRING BRACKET
92	21500	SPRING BRACKET
93	21500	SPRING BRACKET
94	21500	SPRING BRACKET
95	21500	SPRING BRACKET
96	21500	SPRING BRACKET
97	21500	SPRING BRACKET
98	21500	SPRING BRACKET
99	21500	SPRING BRACKET
100	21500	SPRING BRACKET

### Standard Vertical 5 Model SV-5 Parts List

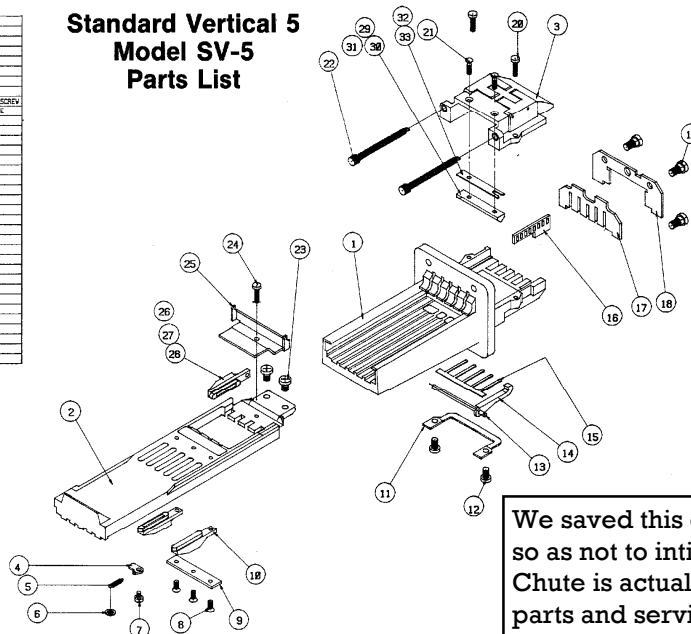

We saved this exploded drawing for last, so as not to intimidate anyone. If your Push Chute is actually broken and requires parts and service, that's a bit more difficult. Best to get help from an expert, or at least proceed with caution.